



Instructions for **BEHRINGER BCR2000** & 'Simple Mixer' preset

BEHRINGER BCR2000 Simple Mixer

This document will give you a quick overview about the **BEHRINGER BCR2000** 'SIMPLE MIXER' PRESET and how to install it.

Please consider this preset merely as a starting point and as inspiration for your own imagination.

Installation:

1. Open and extract the ZIP file.

The following files are included:

- This INSTRUCTION text document (.pdf)
- SINGLE PRESET file (.syx)

2. How to get the B-CONTROL PRESET from your computer into your hardware:

- **Connect the B-Control to your computer** via USB or MIDI port (Computer MIDI OUT to B-Control MIDI IN)
- **Select the correct USB or stand alone operating mode** on the hardware (please refer to the manual for details)
- **Open the B-Control preset file with a MIDI dump program** like "MIDI-OX" or "Send SX" on your computer or use the B-CONTROL EDIT software editor, which is available free of charge at our homepage www.behringer.com
- Don't forget to **select the correct MIDI ports** into the dump software!

- **Dumping a single preset (SINGLE DUMP)**
 1. **Select the preset** ('bcr_Simple_Mixer.syx') on your MIDI dump program
 2. **Send the preset** to the B-CONTROL and wait until completion
 3. **Push the STORE** button on the hardware
 4. **Select the desired destination** preset number
 5. **Push the STORE** button again
 6. **The preset is now saved** on your hardware
 7. Now you can dump the next preset (proceed with steps 1 thru 5 again)

Hint: If you do not want to overwrite one of your presets in the B-CONTROL hardware, select a vacant destination number during step 4 (e.g. preset 'P-32').

#	Name	Type	Description/Application
02	'bcr_Simple_Mixer'	Single Preset	Assignment for a simple mixer control (ch. 1-8) with standard CC-commands + MMC control buttons + direct program change buttons (ch. 11) for an additional sound module or effect plug-in

Preset Name: BCR - Simple Mixer

The interface includes the following sections:

- Top Grid:** Controls for Pan (Ch. 1-8), Balance (Ch. 1-8), FX 1 (Ch. 1-8), and FX 2 (Ch. 1-8).
- Program Change Buttons:** Two rows of buttons for Ch. 1-16 and Ch. 1-8.
- EQ and Volume Controls:** Rows for EQ 2 (Ch. 1-8), EQ 1 (Ch. 1-8), and Volume (Ch. 1-8).
- Right Panel:** Includes a FOOTSWITCH section with MMC Punch In and MMC Punch Out buttons, a display showing 'P-2', and a B-CENTRAL PROTOPIA BCR8000 control panel with buttons for TRIM, LOW, and other functions.
- Bottom Right:** MMC control buttons for Locate 0, Fwd, Stop, and Play.

Please consider this preset as a starting point
for creating your own edits/alignments.

© 2004 BEHRINGER Spezielle Studiotechnik GmbH