

electro-harmonix

WIGGLER

All tube Vibrato and Tremolo

Congratulations on your purchase of the Wiggler! The Wiggler is a warm sounding Vibrato/Tremolo pedal with an All Tube signal path using two premium 12AX7WB vacuum tubes. Carefully reading these instructions will ensure that you will get the most out of your Wiggler.

Included with the Wiggler is a unique 12VAC/1000mA adaptor. Use only the adaptor supplied. Using any other adaptor can cause harm to you, the Wiggler and the adaptor.

WARNING: There are extremely high voltages in the Wiggler even when it is unplugged – **DO NOT OPEN UP THE WIGGLER!**

- CONTROLS -

Tremolo/Vibrato Switch – Selects the type of effect.

Vibrato Mode Switch – When the Wiggler is in Vibrato mode, the **VIBRATO MODE** switch will select between four different types of Vibrato sounds: **LOOZ**, **HAMM**, **ACEY**, and **WURL**. This switch has no function when the unit is in Tremolo mode.

RATE Knob – Adjusts the speed of modulation for the Vibrato or Tremolo. As the RATE knob is turned from the Counter-Clockwise (minimum) position to the Clockwise (maximum) position, the rate of modulation will increase.

INTENSITY Knob – Adjusts the amount of Vibrato or Tremolo that will effect your signal. As the **INTENSITY** knob is turned from the Counter-Clockwise (minimum) position to the Clockwise (maximum) position, the amount of the effect will increase.

VOLUME Knob – Adjusts the level of the **OUTPUT** signal.

RATE LED – Blinks at the same rate that the effect modulates.

STATUS LED – Lights up when the Tube Wiggler effect is engaged. If the STATUS led is off, the unit is in **TRUE BYPASS** mode. The Footswitch engages/disengages the effect.