



- On/off** Press and hold the play/pause button (▶||) for 3 seconds.
- Volume** Press the control pad up or down.
- Next/previous** To skip, press the control pad right. To go back, press left.
- Fast-forward/rewind** To fast-forward, press and hold the control pad right. To rewind, press and hold left.
- Previous menu** Press the back button (◀).
- Return to the home screen** Press and hold the back button (◀).
- Reset** Press and hold the back button (◀) while pressing up on the control pad.
- Lock/unlock** To lock the controls, set the hold switch (Ⓐ) to red.

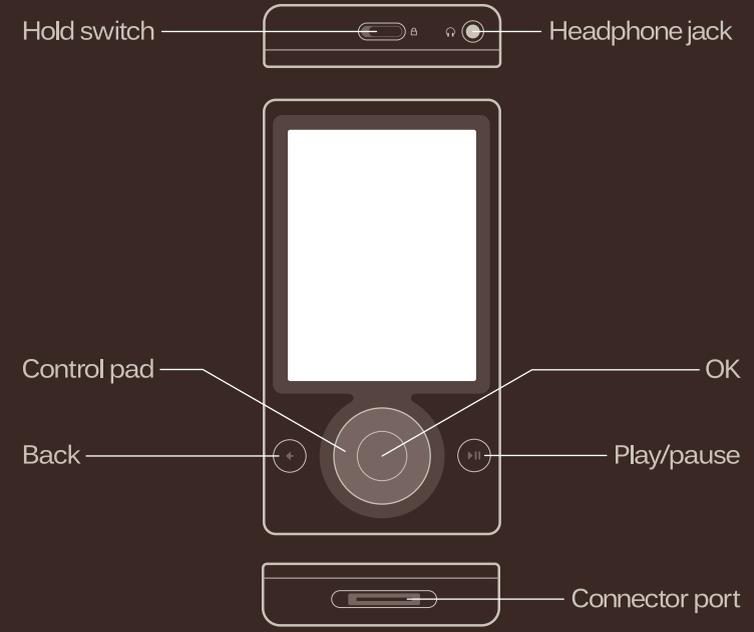


Start

See the Zune™ Product Guide for important safety information. For more, see www.zune.net.

©2006 Microsoft Corporation. All rights reserved. 0806 Part No. X12-55869-03

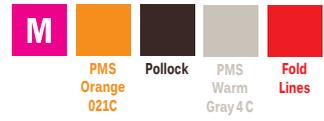

1. Load the startup software.

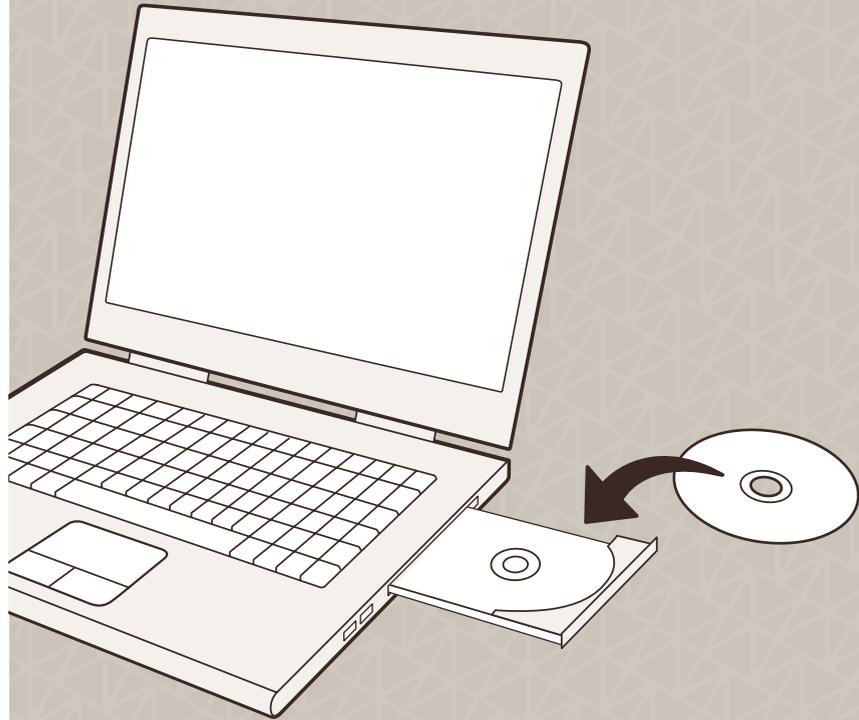

2. When prompted by the software, connect and charge Zune™. Full charge can take up to 3 hours.



3. Sync your music, video, and pictures.

