

# KR-1077M

DIGITAL  
INTELLIGENT PIANO

## Contents

---

USING THE UNIT SAFELY .....	2
IMPORTANT NOTES .....	3
Having the Automatic Keyboard Operate During Song Playback	
Turning On the Power .....	3
Adjusting the Sound Volume .....	3
Consecutively Playing Back All Songs .....	3
Playing Back a Single Song .....	4
Turning Off the Power .....	4
Changing the Part That Makes the Keys Move .....	4
Suppressing Movement of the Automatic Keyboard .....	5
Error Message .....	5
Demo Song (Specific to the KR-1077M) .....	5
Main Specifications .....	6

Before using this unit, carefully read the sections entitled: "IMPORTANT SAFETY INSTRUCTIONS" (KR-1077/977/577 Owner's Manual p. 2), "USING THE UNIT SAFELY" (KR-1077/977/577 Owner's Manual p. 3 and KR-1077M Owner's Manual p. 2), and "IMPORTANT NOTES" (KR-1077/977/577 Owner's Manual p. 5 and KR-1077M Owner's Manual p. 3). These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new unit, Owner's Manual should be read in its entirety. The manual should be saved and kept on hand as a convenient reference.

Copyright © 2000 ROLAND CORPORATION

All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.

# USING THE UNIT SAFELY

## INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

### About ⚠ WARNING and ⚠ CAUTION Notices

<b>⚠ WARNING</b>	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
<b>⚠ CAUTION</b>	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

### About the Symbols

	The ⚠ symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The ⚡ symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The ⚡ symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

### ALWAYS OBSERVE THE FOLLOWING

#### ⚠ WARNING

- Before using this unit, make sure to read the instructions below, the KR-1077/977/577 Owner's Manual, and KR-1077M Owner's Manual. 
- Immediately turn the power off, and request servicing by your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page when:
  - Objects have fallen into, or liquid has been spilled onto the unit; or
  - The unit has been exposed to rain (or otherwise has become wet); or
  - The unit does not appear to operate normally or exhibits a marked change in performance.
  - If abnormal sounds are produced
  - If error messages (Error.61, Error.62) have appeared
- Be careful not to touch the keys while the automatic keyboard is functioning, as this may sprain your fingers or damage the keyboard. 

# IMPORTANT NOTES

In addition to the items listed under “USING THE UNIT SAFELY” on page 2, “IMPORTANT NOTES” on KR-1077/977/577 Owner’s Manual pages 5 and 6, please read and observe the following:

- While the automatic keyboard is in operation, avoid doing anything that could hamper the action of the keys, such as using undue force to press a key, or forcing up a depressed key. By doing so, you risk causing malfunction.

## Having the Automatic Keyboard Operate During Song Playback

### Turning On the Power

\* Be sure to follow the steps below when turning the power on or off. By turning on devices in the wrong order, you risk causing malfunction and/or damage to speakers and other devices.

1. Before you switch on the power, turn the volume down by rotating the [Volume] knob to “Min.”




2. Check the following points.

- The included power cord is connected to the AC inlet on the bottom of the piano.
  - The power cord is correctly connected to the AC outlet.
- \* Be sure to use the supplied power cord.

3. Press the [Power] switch.

After a few seconds, the unit becomes operable and playing the keyboard produces sound.

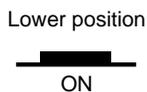

\* This unit is equipped with a protection circuit. A brief interval (a few seconds) after power up is required before the unit will operate normally.

### Adjusting the Sound Volume

You can adjust the overall volume level.

1. Rotate the [Volume] knob to the left or right.

The volume increases as the knob is rotated to “Max” (the right) and decreases as the dial is rotated to “Min” (the left).



→ The mark to the upper right of the Volume knob indicates the volume level typically produced by an acoustic piano. This is usually the most appropriate volume for your piano performances.

### Consecutively Playing Back All Songs

1. Press the [Song/Disk] button.

A Song/Disk screen appears.



2. If you want to play back songs, insert the floppy disk into the disk drive.

→ This procedure isn't necessary when you're playing back preset songs, or songs saved in user memory.

3. Touch either the , , or  icon.

To select songs from disk touch  (DISK), to select preset songs touch  (PRESET), or to select songs from user memory touch  (USER).

4. Touch  (All Song Play) on the screen.

Song playback starts, and the keys move in keeping with the song.

All songs are played back in sequence. The on-screen  (Play) changes to  (Stop). When the last song has finished playing, playback then repeats after returning to the first song.

5. Press the Stop  button or touch  (Stop) on screen to stop playback of the songs.

\* If the keys do not move when you play music files, it could be because a mistake has been made with respect to the Part that makes the keys move. For details, refer to “Changing the Part That Makes the Keys Move” (p. 4).

## Playing Back a Single Song

### ■ Choosing the Song to Play Back

1. Press the [Song/Disk] button.  
A Song/Disk screen appears.
2. If you want to play back songs, insert the floppy disk into the disk drive.  
→ *This procedure isn't necessary when you're playing back preset songs, or songs saved in user memory.*
3. Touch either the , , or  icon.  
To select songs from disk touch  (DISK), to select preset songs touch  (PRESET), or to select songs from user memory touch  (USER).
4. Touch Page < ◀ > and < ▶ > to switch screens, and touch the screen to choose a song.  
→ *You can also use the dial to choose a song. When you use the dial, the pages are switched automatically, without having to touch Page < ◀ > and < ▶ >.*

### ■ Playing Back a Song

5. Press the Play [ ▶ ] button or touch < ▶ > (Play) on the screen to play back the song.  
Song playback starts, and the keys move in keeping with the song.  
The on-screen < ▶ > (Play) changes to < ■ > (Stop).  
→ *You can press the [Score] button to display the score for the selected song.*

### ■ Stopping Song Playback


6. Press the Stop [ ■ ] button or touch < ■ > (Stop) on screen to stop playback.  
If you let the selected song play to the end, playback stops automatically.  
The on-screen < ■ > (Stop) changes to < ▶ > (Play).
7. Press the Reset [ ◀ ] button to go back to the beginning of the song.

### ○ Important Notes about the Automatic Keyboard

- The keys will not move during recording.
- To ensure more accurate expression during play, separate systems are used for song play and keyboard drive. This means that depending on the song, the movement of the keyboard may differ slightly from song play.

## Turning Off the Power

1. Before you switch off the power, turn the volume down by rotating the [Volume] knob to "Min" all the way.
2. Press the [Power] switch.  
The power is switched off.

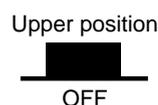

## Changing the Part That Makes the Keys Move

### ■ Using the Track Buttons to Choose the Part That Makes the Keys Move

Upon power-up, the instrument is set so the keys move in keeping with the performances of the Whole, Upper, and Lower tracks. You can change the parts that key movement will reflect by pressing the Track buttons, and changing the buttons that are lighted.

The following shows the relationship between the Track buttons, played parts, and keyboard movement.

Indicator	Keyboard	Sound
Indicator flashing	Movement	Sound
Indicator on	No movement	Sound
Indicator Off	No movement	No sound

1. Choose the song to play (p. 3, 4).
2. Press the Track button you want to have associated with key movement a number of times, until the button's light is flashing.  
Each time you press a Track button, its light changes to the next state, in this order: lighted → extinguished → flashing → lighted →....
3. Press the Play [ ▶ ] button.  
Song playback starts, and the keys move in accord with what is played as a result of the flashing Track button or buttons.

## Having the Automatic Keyboard Operate During Song Playback

### ■ Using the 16 Track Sequencer Screen to Choose the Part That Makes the Keys Move

You can get the keys to move in keeping with the performance of parts selected with the 16 Track Sequencer screen.

1. **Choose the song to play (p. 3, 4).**
2. **Press the [Composer Navigator] button.**  
The Composer Navigator screen will appear.
3. **Touch <16 Track Sequencer>**  
The 16 Track Sequencer screen will appear.
4. **Touch the part you want to have associated with key movement.**  
The following shows the relationship between the indication in the display (icons), played parts, and keyboard movement.

Icon	Keyboard	Sound
	Movement	Sound
	No Movement	Sound
	No movement	No sound (no performance data for this part)


Icon	Keyboard	Sound
	No movement	No sound (no keyboard movement for muted parts)

#### 5. Press the Play [▶] button.

Song playback starts, and the keys move in keeping with the performance of the selected part (s).

## Suppressing Movement of the Automatic Keyboard

1. **Press the [Composer Navigator] button.**  
The Composer Navigator screen will appear.
2. **Touch <MovingKey> to switch the automatic keyboard on or off.**  
→ The power-up default settings call for the automatic keyboard to be activated.

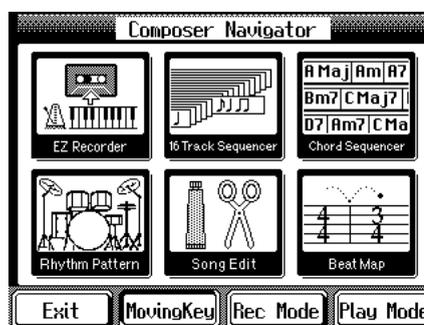

## Error Message

### Indication: Error.61

Meaning: There is a problem with the automatic keyboard system. Stop use immediately, and contact the nearest Roland Service Center.

### Indication: Error.62

Meaning: There is a problem with the automatic keyboard system. Stop use immediately, and contact the nearest Roland Service Center.

## Demo Song (Specific to the KR-1077M)

	Title	Composer
1	Blue sky rag	Susumu Ueda

### Susumu Ueda

Graduate of the Department of Composition, Kyoto City University of Arts. Has composed a large number of works of many types in a wide range of genres, including the official ceremony music for the torch relay at the Nagano Winter Olympics, the performance music for the opening and closing ceremonies of the Hiroshima Asian Games, and the music for Kobe Luminarie '99, as well as compositions for other events, television programs, commercials, movies, stage, and published scores. His albums on CD include Asian Rhapsody, KYOTO, Godai Meiso (Meditation on the Five Elements), and The Straits. As music producer for Discovery Firm, Inc., he is also involved in production and supervision of compilations of a variety of musical works, primarily MIDI works, including SMF data and CD-ROMs for sound generating devices.

→ For info and cautions on the other demo songs, please refer to the KR-1077/977/577 Owner's Manual.

# Main Specifications

## <Keyboard>

### ● Keyboard

88 Moving keys Progressive Hammer action mechanism with Escapement

### ● Touch Sensitivity

100 levels

### ● Keyboard Mode

Whole

Split (adjustable split point)

Layer

Arranger

Piano Style Arranger

Manual Drum/SFX

## <Sound Source>

Conforms to GS/GM2

### ● Max.Polyphony

128 voices

### ● Tones

7 groups 608 variations (including 16 drum sets, 1 SFX set)

Footage Organ Edit

### ● Temperament

8 types, selectable tonic

### ● Stretched Tuning

2 types

### ● Master Tuning

415.3 Hz–466.2 Hz (0.1 Hz Steps)

### ● Transpose

Key Transpose (-6–+5 Half-steps)

Playback Transpose (-24–+24 Half-steps)

### ● Effects

Reverb (8 types, stepless level adjustable),

Chorus (8 types 127 levels)

Sympathetic Resonance, Rotary and 45 other types

Advanced 3D

Physical Damper Simulation (Advanced, Resonance)

## <Arranger>

### ● Music Styles

Internal: 8 groups 200 styles x 4 types (Style Orchestrator)

Music Style Disk: 34 Styles

### ● Programmable Music Styles

Style Converter

Style Composer

### ● Melody Intelligence

24 types

### ● User Programs

Internal: 36

Disk: Max.99 sets

### ● Control

Start/Stop

Intro/Ending (2 types for each styles),

Sync. Start

Fill In (Variation/Original)

Arranger Reset

Count Down

Melody Intelligence

Break

Leading Bass

Half Fill In (Variation/Original)

## <Composer>

### ● Metronome

Beat: 2/2, 0/4, 2/4, 3/4, 4/4, 5/4, 6/4, 7/4, 3/8, 6/8, 9/8, 12/8

Volume: 10 levels

Metronome Pattern: 11 patterns

Sounds: 8 types

### ● Tracks

5/16 tracks

### ● Song

1 song

### ● Note Storage

Approx. 30,000 notes

### ● Tempo

Quarter note = 20–250

### ● Resolution

120 ticks per quarter note

### ● Recording Method

Realtime (Replace, Mix, Auto Punch In, Manual Punch In,

Loop, Tempo)

Step (On Chord Sequence mode)

Beat Map

### ● Edit

Copy, Quantize, Delete, Insert, Erase, Transpose, Part

Exchange, Note Edit, PC Edit

### ● Rhythm Pattern

40 types

### ● Control

Song Select, Reset, Stop, Play, Rec, Bwd, Fwd, All Song Play

Track Select, Count In, Playback Balance, Marker Set, Repeat,

Tempo Mute

### <Disk Drive / Disk Storage>

3.5 inch Micro Floppy Disk

#### ● Disk Format

720 K bytes (2DD)

1.44 M bytes (2HD)

#### ● Songs

Max. 99 songs

#### ● Note Storage

Approx. 120,000 notes (2DD)

Approx. 240,000 notes (2HD)

#### ● Playable Software

Standard MIDI Files (Format 0/1)

Roland Original Format (i-Format)

#### ● Save

Standard MIDI Files (Format 0)

Roland Original Format (i-Format)

### <Internal Memory>

#### ● Preset

65 songs

#### ● User Memory

Max. 200 songs and styles

### <Others>

#### ● Rated Power Output

60 W x 4

#### ● Speakers

20 cm x 6, 8 cm x 4, 5 cm x 2

#### ● Display

Beat Indicator

Graphic 320 x 240 dot backlit LCD with touch screen

#### ● Score

Great staff/G Clef staff/F Clef staff

with note name/with Lyric

#### ● Language

English/German/French/Spanish/Japanese

#### ● Lyrics

Yes (Built-in Display, MIDI Out)

#### ● Control

Volume, Brilliance, Reverb, Balance, Microphone Volume

#### ● One Touch Play

One Touch Piano, One Touch Organ, One Touch Arranger

#### ● Pedals

Damper (half-pedal recognition)

Soft (half-pedal recognition, Function assignable)

Sostenuto (Function assignable)

#### ● Vocal Effects

Echo, Voice Transformer, Harmonist, Vocal Keyboard

#### ● Other Functions

Arranger Navigator, Tone Navigator, Composer Navigator

Learning Partner, Games, On-screen help, Audition,

Panel Lock

#### ● Connectors

Output jacks (L/Mono, R)

Input jacks (L/Mono, R)

Microphone jack

Headphone jack x 2 (Stereo)

MIDI In connector

MIDI Out connector

Computer connector

Pedal Connector (8 pin DIN type)

Expression Pedal connector

#### ● Power supply

AC 117 V, AC 230 V, AC 240 V

#### ● Power Consumption

270 W (AC 117 V)

220 W (AC 230 V)

210 W (AC 240 V)

#### ● Cabinet finish

Polished Evony

#### ● Dimensions (Estimated, Lid Closed)

1502 (W) x 1580 (D) x 1010 (H) mm

59"3/16 (W) x 62"1/4 (D) x 39"13/16 (H)

#### ● Weights

208 kg 458 lbs 11 oz

#### ● Accessories

Owner's manual

Power cord

Data Disk

Maintenance Kit

*\* In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.*

# Information

When you need repair service, call your nearest Roland Service Center or authorized Roland distributor in your country as shown below.

## AFRICA

### EGYPT

**Al Fanny Trading Office**  
P.O. Box 2904,  
El Horrieh Heliopolis, Cairo,  
EGYPT  
TEL: (02) 4185531

### REUNION

**Maison FO - YAM Marcel**  
25 Rue Jules Mermet, ZL  
Chaudron - BP79 97491  
Ste Clotilde REUNION  
TEL: 28 29 16

### SOUTH AFRICA

**That Other Music Shop  
(PTY) Ltd.**  
11 Melle Street (Cnr Melle and  
Juta Street)  
Braamfontein, 2001,  
Republic of SOUTH AFRICA  
TEL: (011) 403 4105

### Paul Bothner (PTY) Ltd.

17 Werdmuller Centre Claremont  
7700  
Republic of SOUTH AFRICA

P.O. Box 23032  
Claremont, Cape Town  
SOUTH AFRICA, 7735  
TEL: (021) 64 4030

## ASIA

### CHINA

**Beijing Xinghai Musical  
Instruments Co., Ltd.**  
6 Huangmunchang Chao Yang  
District, Beijing, CHINA  
TEL: (010) 6774 7491

### HONG KONG

**Tom Lee Music Co., Ltd.  
Service Division**  
22-32 Pun Shan Street, Tsuen  
Wan, New Territories,  
HONG KONG  
TEL: 2415 0911

### INDIA

**Rivera Digitech (India) Pvt. Ltd.**  
409, Nirman Kendra Mahalaxmi  
Flats Compound Off. Dr. Edwin  
Moses Road, Mumbai-400011,  
INDIA  
TEL: (022) 498 3079

### INDONESIA

**PT Citra IntiRama**  
Jl. Cideng Timur No. 15J-150  
Jakarta Pusat  
INDONESIA  
TEL: (021) 6324170

### KOREA

**Cosmos Corporation**  
1461-9, Seocho-Dong,  
Seocho Ku, Seoul, KOREA  
TEL: (02) 3486-8855

### MALAYSIA

**Bentley Music SDN BHD**  
140 & 142, Jalan Bukit Bintang  
55100 Kuala Lumpur, MALAYSIA  
TEL: (03) 2443333

### PHILIPPINES

**G.A. Yupangco & Co. Inc.**  
339 Gil J. Puyat Avenue  
Makati, Metro Manila 1200,  
PHILIPPINES  
TEL: (02) 899 9801

### SINGAPORE

**Swee Lee Company**  
150 Sims Drive,  
SINGAPORE 387381  
TEL: 748-1669

### CRISTOFORI MUSIC PTE LTD

Blk 3014, Bedok Industrial Park E,  
#02-2148, SINGAPORE 489980  
TEL: 243 9555

### TAIWAN

**ROLAND TAIWAN  
ENTERPRISE CO., LTD.**  
Room 5, 9fl. No. 112 Chung Shan  
N. Road Sec.2, Taipei, TAIWAN,  
R.O.C.  
TEL: (02) 2561 3339

### THAILAND

**Theera Music Co., Ltd.**  
330 Verng NakornKasem, Soi 2,  
Bangkok 10100, THAILAND  
TEL: (02) 2248821

### VIETNAM

**Saigon Music**  
138 Tran Quang Khai St.,  
District 1  
Ho Chi Minh City  
VIETNAM  
TEL: (08) 844-4068

## AUSTRALIA/ NEW ZEALAND

### AUSTRALIA

**Roland Corporation  
Australia Pty., Ltd.**  
38 Campbell Avenue  
Dee Why West, NSW 2099  
AUSTRALIA  
TEL: (02) 9982 8266

### NEW ZEALAND

**Roland Corporation (NZ) Ltd.**  
97 Mt. Eden Road, Mt. Eden,  
Auckland 3, NEW ZEALAND  
TEL: (09) 3098 715

## CENTRAL/LATIN AMERICA

### ARGENTINA

**Instrumentos Musicales S.A.**  
Florida 656 2nd Floor  
Office Number 206A  
Buenos Aires  
ARGENTINA, CP1005  
TEL: (54-11) 4- 393-6057

### BRAZIL

**Roland Brasil Ltda.**  
R. Coronel Octaviano da Silveira  
203 05522-010  
Sao Paulo BRAZIL  
TEL: (011) 3743 9377

### COSTA RICA

**JUAN Bansbach  
Instrumentos Musicales**  
Ave.1. Calle 11, Apartado 10237,  
San Jose, COSTA RICA  
TEL: (506)258-0211

### CHILE

**Comercial Fancy S.A.**  
Avenida Rancagua #0330  
Providencia Santiago, CHILE  
TEL: 56-2-373-9100

### EL SALVADOR

**OMNI MUSIC**  
75 Avenida Notre YY Alameda,  
Juan Pablo 2, No. 4010  
San Salvador, EL SALVADOR  
TEL: (503) 262-0788

### MEXICO

**Casa Veerkamp, s.a. de c.v.**  
Av. Toluca No. 323, Col. Olivar  
de los Padres 01780 Mexico D.F.  
MEXICO  
TEL: (525) 668 04 80

### La Casa Wagner de

**Guadalajara s.a. de c.v.**  
Av. Corona No. 202 S.J.  
Guadalajara, Jalisco Mexico  
C.P.44100 MEXICO  
TEL: (3) 613 1414

### PANAMA

**SUPRO MUNDIAL, S.A.**  
Boulevard Andrews, Albrook,  
Panama City,  
REP. DE PANAMA  
TEL: (507) 315-0101

### PARAGUAY

**Distribuidora De  
Instrumentos Musicales**  
J.E. Olear y ESQ. Manduvira  
Edeficio, El Dorado Planta Baja  
Asuncion PARAGUAY  
TEL: 595-21-492147

### PERU

**VIDEO Broadcast S.A.**  
Portinari 199 (ESQ. HALS),  
San Borja, Lima 41,  
REP. OF PERU  
TEL: 51-14-758226

### URUGUAY

**Todo Musica S.A.**  
Cuareim 1844, Montevideo,  
URUGUAY  
TEL: 5982-924-2335

### VENEZUELA

**Musicaid Digital C.A.**  
Av. Francisco de Miranda,  
Centro Parque de Cristal, Nivel  
C2 Local 20 Caracas  
VENEZUELA  
TEL: (02) 285 9218

## EUROPE

### AUSTRIA

**Roland Austria GES.M.B.H.**  
Siemensstrasse 4, P.O. Box 74,  
A-6063 RUM, AUSTRIA  
TEL: (0512) 26 44 260

### BELGIUM/HOLLAND/ LUXEMBOURG

**Roland Benelux N. V.**  
Houtstraat 3, B-2260, Oevel  
(Westerlo) BELGIUM  
TEL: (014) 575811

### DENMARK

**Roland Scandinavia A/S**  
Nordhavnsvej 7, Postboks 880,  
DK-2100 Copenhagen  
DENMARK  
TEL: (039)16 6200

### FRANCE

**Roland France SA**  
4, Rue Paul Henri SPAAK,  
Parc de l'Esplanade, F 77 462 St.  
Thibault, Lagny Cedex FRANCE  
TEL: 01 600 73 500

### FINLAND

**Roland Scandinavia As,  
Filial Finland**  
Lauttasarentie 5 B  
Fin-00201 Helsinki, FINLAND  
TEL: (9) 682 4020

### GERMANY

**Roland Elektronische  
Musikinstrumente HmbH.**  
Oststrasse 96, 22844 Norderstedt,  
GERMANY  
TEL: (040) 52 60090

### GREECE

**STOLLAS S.A.**  
Music Sound Light  
155, New National Road  
26422 Patras, GREECE  
TEL: 061-435400

### HUNGARY

**Intermusica Ltd.**  
Warehouse Area 'DEPO' Pf.83  
H-2046 Torokbalint, HUNGARY  
TEL: (23) 511011

### IRELAND

**Roland Ireland**  
Audio House, Belmont Court,  
Donnybrook, Dublin 4.  
Republic of IRELAND  
TEL: (01) 2603501

### ITALY

**Roland Italy S. p. a.**  
Viale delle Industrie 8,  
20020 Arese, Milano, ITALY  
TEL: (02) 937-78300

### NORWAY

**Roland Scandinavia Avd.  
Kontor Norge**  
Lilleakerveien 2 Postboks 95  
Lilleaker N-0216 Oslo  
NORWAY  
TEL: 273 0074

### POLAND

**P. P. H. Brzostowicz**  
UL. Gibraltarska 4,  
PL-03664 Warszawa POLAND  
TEL: (022) 679 44 19

### PORTUGAL

**Tecnologias Musica e Audio,  
Roland Portugal, S.A.**  
RUA DE SANTA CARARINA  
131/133, 4000-450 PORTO  
PORTUGAL  
TEL: (022) 208 4456

### ROMANIA

**FBS LINES**  
Plata Libertatii 1,  
RO-4200 Cheorgheni  
TEL: (066) 164-609

### RUSSIA

**Slami Music Company**  
Sadovaya-Triumfalnaja st., 16  
103006 Moscow, RUSSIA  
TEL: 095 209 2193

### SPAIN

**Roland Electronics  
de España, S. A.**  
Calle Bolivia 239, 08020  
Barcelona, SPAIN  
TEL: (93) 308 1000

### SWEDEN

**Roland Scandinavia A/S  
SWEDISH SALES OFFICE**  
Danvik Center 28, 2 tr.  
S-131 30 Nacka SWEDEN  
TEL: (08) 702 0020

### SWITZERLAND

**Roland (Switzerland) AG  
Musitronic AG**  
Gerberstrasse 5, CH-4410 Liestal,  
SWITZERLAND  
TEL: (061) 921 1615

### UKRAINE

**TIC-TAC**  
Mira Str. 19/108  
P.O. Box 180  
295400 Munkachevo, UKRAINE  
TEL: (03131) 414-40

### UNITED KINGDOM

**Roland (U.K.) Ltd.**  
Atlantic Close, Swansea  
Enterprise Park, SWANSEA  
SA7 9FJ,  
UNITED KINGDOM  
TEL: (01792) 700139

## MIDDLE EAST

### BAHRAIN

**Moon Stores**  
Bab Al Bahrain Road,  
P.O. Box 20077  
State of BAHRAIN  
TEL: 211 005

### CYPRUS

**Radex Sound Equipment Ltd.**  
17 Diagorou St., P.O. Box 2046,  
Nicosia CYPRUS  
TEL: (02) 453 426

### ISRAEL

**Halilit P. Greenspoon &  
Sons Ltd.**  
8 Retzif Fa'aliya Hashnya St.  
Tel-Aviv-Yaho ISRAEL  
TEL: (03) 6823666

### JORDAN

**AMMAN Trading Agency**  
Prince Mohammed St. P.O. Box  
825 Amman 11118 JORDAN  
Safat KUWAIT  
TEL: (06) 4641200

### KUWAIT

**Easa Husain Al-Yousifi**  
Abdullah Salem Street,  
Chahine Building, Achrafieh  
Beirut, LEBANON  
TEL: 5719499

### LEBANON

**A. Chahine & Fils**  
P.O. Box 16-5857 Gergi Zeidan St.  
Chahine Building, Achrafieh  
Beirut, LEBANON  
TEL: (01) 335799

### QATAR

**Badie Studio & Stores**  
P.O. Box 62,  
DOHA QATAR  
TEL: 4235554

### SAUDI ARABIA

**aDawlah Universal  
Electronics APL**  
P.O. Box 2154 ALKHOBAR 31952,  
SAUDI ARABIA  
TEL: (03) 898 2081

### SYRIA

**Technical Light & Sound  
Center**  
Khaled Ibn Al Walid St.  
P.O. Box 13520  
Damascus - SYRIA  
TEL: (011) 2235 384

### TURKEY

**Barkat muzik aletleri ithalat  
ve ihracat Ltd Sti**  
Siraselviler cad.Guney is hani 84-  
86/6, Taksim. Istanbul. TURKEY  
TEL: (0212) 2499324

### U.A.E.

**Zak Electronics & Musical  
Instruments Co. L.L.C.**  
Zabeel Road, Al Sherooq Bldg.,  
No. 14, Grand Floor DUBAI  
U.A.E.  
TEL: (04) 3360715

## NORTH AMERICA

### CANADA

**Roland Canada Music Ltd.  
(Head Office)**  
5480 Parkwood Way Richmond  
B. C., V6V 2M4 CANADA  
TEL: (0604) 270 6626

### Roland Canada Music Ltd. (Toronto Office)

Unit 2, 109 Woodbine Downs  
Blvd, Etobicoke, ON  
M9W 6Y1 CANADA  
TEL: (0416) 213 9707

### U. S. A.

**Roland Corporation U.S.**  
5100 S. Eastern Avenue  
Los Angeles, CA 90040-2938,  
U. S. A.  
TEL: (323) 890 3700