

Expansion Tones

No.	Tone Name	CC 0	CC 32	PC#	No.	Tone Name	CC 0	CC 32	PC#	No.	Tone Name	CC 0	CC 32	PC#
* 001	Grand Piano1	08	64	001	* 049	Jazz Organ 4	00	65	018	097	Clean Gt.	00	00	028
* 002	Grand Piano2	08	64	002	* 050	Full Organ 1	00	65	017	098	Chorus Gt.	08	00	028
* 003	UprightPiano	16	64	001	* 051	Full Organ 2	08	65	017	* 099	Muted Gt.	00	00	029
* 004	MIDI Piano1	00	65	001	* 052	Full Organ 3	16	65	017	100	Muted Dis.Gt	00	64	029
* 005	MIDI Piano2	00	65	002	* 053	Full Organ 4	32	65	017	101	Funk Gt.	08	00	029
006	Piano 1	00	00	001	* 054	Lower Organ1	00	66	017	102	Funk Gt.2	16	00	029
007	Piano 2	00	00	002	* 055	Lower Organ2	08	66	017	* 103	Overdrive Gt	00	00	030
008	Piano 3	00	00	003	056	Organ 1	00	00	017	* 104	DistortionGt	00	64	031
009	EG+Rhodes 1	00	65	003	057	Organ 2	00	00	018	105	GS Dist.Gt.	00	00	031
010	EG+Rhodes 2	00	66	003	* 058	Pop Organ	18	00	017	106	Dazed Guitar	00	65	031
* 011	Rock Piano	08	64	003	* 059	VS Organ	32	64	017	* 107	Rock Rhythm	08	66	031
* 012	Honky-tonk 1	08	64	004	060	Metalic Org.	32	66	017	108	Rock Rhythm2	00	66	031
* 013	Honky-tonk 2	08	00	004	061	Detuned Or.1	08	00	017	109	Feedback Gt.	08	00	031
* 014	E.Piano 1	16	64	005	062	Detuned Or.2	08	00	018	110	Feedback Gt2	09	02	031
* 015	E.Piano 2	16	64	006	* 063	Rock Organ 1	00	64	019	* 111	Power Guitar	08	65	031
016	E.Piano 3	00	65	006	* 064	Rock Organ 2	00	00	019	112	Power Gt.2	08	64	031
017	Hard Rhodes	00	65	005	065	Rotary Org.S	00	65	019	113	5th Dist.	18	02	031
018	Detuned EP 1	08	00	005	066	Rotary Org.F	00	66	019	114	Gt.Harmonics	00	00	032
019	Detuned EP 2	08	00	006	* 067	Organ Flute	00	64	020	* 115	Acoustic Bs.	00	64	033
* 020	Soft E.Piano	08	64	005	* 068	Church Organ	08	65	020	* 116	A.Bass+Cymb1	00	65	033
021	FM+SA EP	16	02	005	069	Digi Church	00	64	021	117	GS Ac.Bass	00	00	033
* 022	60's E.Piano	24	00	005	* 070	Theater Org.	16	64	020	* 118	Fingered Bs.	00	64	034
* 023	Hard E.Piano	00	64	006	* 071	Trem.Flute	08	64	020	119	GS Fing.Bass	00	00	034
024	St.FM EP	08	64	006	072	Pipe Org. Bs	32	65	018	* 120	Picked Bass	00	64	035
025	Hard FM EP	08	66	006	* 073	Organ Bass	40	02	017	121	GS Picked Bs	00	00	035
026	E.Piano 1	00	00	005	* 074	Accordion	00	64	022	122	Mute PickBs.	00	65	035
027	E.Piano 1v	16	00	005	075	Accordion Fr	00	00	022	* 123	Fretless Bs.	00	00	036
028	GS E.Piano2	00	00	006	076	Accordion It	08	00	022	124	Mr.Smooth	05	02	036
029	E.Piano 2v	16	00	006	* 077	Harmonica	00	64	023	* 125	Slap Bass 1	00	00	037
* 030	Harpsichord1	00	64	007	078	GS Harmonica	00	00	023	126	Slap Bass 2	00	00	038
* 031	Harpsichord2	08	64	007	079	Bandoneon	00	00	024	127	Synth Bass 1	00	00	039
032	Harpsichord	00	00	007	* 080	Nylon Guitar	00	64	025	128	Synth Bass 2	00	00	040
033	Coupled Hps.	08	00	007	* 081	Gut Guitar	00	65	025	129	Synth Bass 3	08	00	039
034	Harpsi.o	24	00	007	082	GS Nylon Gt.	00	00	025	130	Synth Bass 4	08	00	040
* 035	Clav.	00	00	008	083	Ukulele	08	00	025	* 131	SynthBass101	01	00	039
036	Analog Clav.	00	64	008	084	Nylon Gt.o	16	00	025	132	Reso SH Bass	16	02	039
* 037	Celesta	00	00	009	* 085	Steel Guitar	00	64	026	133	SH101 Bass	16	64	040
* 038	Glockenspiel	00	00	010	086	Steel-str.Gt	00	00	026	* 134	Violin	00	64	041
* 039	Music Box	00	00	011	* 087	12str Guitar	08	64	026	135	GS Violin	00	00	041
* 040	Vibraphone	00	64	012	088	12-str.Gt	08	00	026	136	Slow Violin	08	00	041
* 041	Marimba	08	00	013	089	Nylon+Steel	08	65	026	137	Viola	00	00	042
* 042	Barafon	08	64	013	* 090	Mandolin	16	64	026	* 138	Cello	00	64	043
* 043	Xylophone	00	00	014	091	GS Mandolin	16	00	026	139	GS Cello	00	00	043
* 044	Tubular-bell	00	00	015	* 092	Jazz Guitar	00	00	027	140	Contrabass	00	00	044
* 045	Santur	00	64	016	093	Mellow Gt.	01	02	027	141	Tremolo Str	00	00	045
* 046	Jazz Organ 1	32	00	018	* 094	Hawaiian Gt.	08	64	027	* 142	PizzicatoStr	00	00	046
* 047	Jazz Organ 2	32	64	018	095	GS Hawaiian	08	00	027	* 143	Harp	00	64	047
* 048	Jazz Organ 3	08	64	018	* 096	JC E.Guitar	00	64	028	144	GS Harp	00	00	047

No.	Tone Name	CC 0	CC 32	PC#	No.	Tone Name	CC 0	CC 32	PC#	No.	Tone Name	CC 0	CC 32	PC#
145	Timpani	00	00	048	193	Bottle Blow	00	00	077	241	Clear Bells	00	65	099
* 146	Strings	00	64	049	* 194	Shakuhachi	00	00	078	242	Soft Crystal	02	02	099
147	GS Strings	00	00	049	* 195	Whistle	00	00	079	243	Digi Bells	09	02	099
* 148	Slow Strings	00	64	050	* 196	Ocarina	00	00	080	244	Syn Mallet	01	00	099
149	GS Sl.Str	00	00	050	* 197	Square Wave	00	00	081	* 245	Atmosphere	00	00	100
150	Warm Strings	09	02	050	198	Syn.Square	00	64	081	* 246	Harpvox	00	64	100
* 151	Orchestra	08	00	049	* 199	CC Solo	00	65	081	247	Nylon Harp	00	65	100
152	Choir Str.	11	02	049	200	Square	01	00	081	248	Nylon+Rhodes	00	66	100
* 153	Syn.Strings1	00	00	051	201	FM Lead 1	01	64	081	* 249	Brightness	00	00	101
154	Syn.Strings2	00	00	052	202	FM Lead 2	00	64	088	250	Goblin	00	00	102
155	Syn.Strings3	08	00	051	203	JP8 Square	08	64	081	251	Echo Drops	00	00	103
* 156	Choir	32	00	053	* 204	Saw Wave	00	00	082	252	Echo Bell	01	00	103
* 157	Pop Voice	00	00	054	* 205	Saw	01	00	082	253	Big Panner	00	64	103
* 158	SynVox	00	00	055	206	Mg Lead	00	64	082	254	Ai-yai-a	01	64	103
* 159	Choir Oohs	00	64	055	207	P5 Saw Lead	01	64	082	255	Echo Bell	01	65	103
* 160	OrchestraHit	00	00	056	* 208	Doctor Solo	08	00	082	256	Echo Pan	02	00	103
* 161	Trumpet	00	64	057	209	Rhythmic Saw	08	64	082	257	Echo Pan 2	02	64	103
162	GS Trumpet	00	00	057	210	Waspy Synth	16	02	082	258	Big Panner	04	02	103
* 163	Trombone	00	64	058	* 211	Syn.Calliope	00	00	083	259	Star Theme	00	00	104
164	Trombone 2	01	00	058	212	JP8 Pulse	00	64	083	* 260	Sitar 2	01	00	105
165	Tuba	00	00	059	213	Chiffer Lead	00	00	084	* 261	Banjo	00	00	106
* 166	MutedTrumpet	00	00	060	214	Cheese Saw	00	64	084	* 262	Shamisen	00	64	107
* 167	French Horn	00	00	061	* 215	Charang	00	00	085	* 263	Koto	00	00	108
* 168	Fr.Horn Solo	00	64	061	216	Reso Saw	00	64	085	* 264	Kalimba	00	00	109
* 169	Brass 1	00	00	062	217	Solo Vox	00	00	086	265	Bagpipe	00	00	110
170	Brass 2	08	00	062	218	RAVE Vox	00	64	086	266	Fiddle	00	00	111
* 171	Synth Brass1	00	00	063	219	5th Saw Wave	00	00	087	267	Shanai	00	00	112
* 172	Synth Brass2	00	00	064	* 220	Bass & Lead	00	00	088	268	Tinkle Bell	00	00	113
173	Synth Brass3	08	00	063	221	Fat & Perky	02	02	088	* 269	Steel Drums	00	00	115
174	Synth Brass4	08	00	064	* 222	Fantasia	00	00	089	270	Falling Down	07	64	126
175	Soft Brass	01	02	064	223	Fantasia 2	00	64	089					
* 176	Soprano Sax	00	64	065	* 224	Warm Pad	00	00	090					
177	GS Sop.Sax	00	00	065	225	Soft Pad	00	64	090					
* 178	Alto Sax	00	00	066	* 226	Polysynth	00	00	091					
* 179	Blow Sax	00	64	067	227	P5 Poly	00	64	091					
180	Tenor Sax	00	00	067	228	Space Voice	00	00	092					
181	Baritone Sax	00	00	068	229	Heaven II	00	64	092					
* 182	Oboe	00	64	069	230	Bowed Glass	00	00	093					
183	GS Oboe	00	00	069	* 231	Metal Pad	00	00	094					
184	English Horn	00	00	070	232	Halo Pad	00	00	095					
* 185	Bassoon	00	00	071	233	JP8 Sqr Pad	00	64	095					
* 186	Clarinet	00	00	072	* 234	Sweep Pad	00	00	096					
187	Piccolo	00	00	073	235	Sweep Pad 2	00	64	096					
188	GS Flute	00	00	074	236	Converge	00	66	096					
* 189	Flute	00	64	074	237	Ice Rain	00	00	097					
190	Recorder	00	00	075	* 238	Soundtrack	00	00	098					
* 191	Pan Flute	00	00	076	* 239	Crystal	00	00	099					
* 192	Blow Pipe	00	64	076	* 240	Vibra Bells	00	64	099					