

Newly Added Functions in version 1.20

Following functions have been added to the system for the MV-8000 version 1.20 or later.

- **Receive and synchronize to MIDI Clock (as a “slave” device)** (p. 1)
- **Receive and synchronize to MTC (as a “slave” device)** (p. 2)
- **Importing a portion of an Audio CD** (p. 4)
- **Easily selecting MIDI Events or Audio Events (Quick Region)** (p. 5)
- **Initiate recording when a note message is received** (p. 6)
- **Directly select a pad bank** (p. 6)
- **Use the MIDI IN connector of the DIF-AT24** (p. 6)
- **Cancel Mixdown Mode** (p. 6)
- **Added shortcuts** (p. 7)
- **Copy or move entire folders** (p. 7)
- **Prevent the hard disk from being formatted (HD Format Protect parameter)** (p. 7)

Also, the screens and parameters have added or changed.

- **Added and changed screens** (p. 8)
- **New default settings for the Shuffle Quantize parameters** (p. 10)
- **“Phrase” added to the Step Time parameter** (p. 10)


Receive and synchronize to MIDI Clock (as a “slave” device)

MIDI Clock messages from an externally connected sequencer or recorder (“master device”) can be received by the MV-8000, causing the MV-8000 to operate in synchronization as a slave device.

The example given below is a setup in which a sequencer is the master device, and the MV-8000 receives MIDI Clock messages at its MIDI IN.

1

Connect your sequencer to the MV-8000.

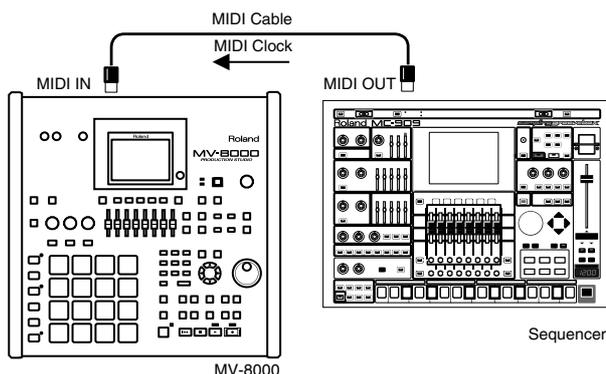

2

Press **SETUP**.

The SONG SETUP MENU screen will appear.

3

With the cursor located in the upper row of icons, press **F2**. Alternatively, select the SYNC icon and press **ENTER**.

The SYNC screen will appear.

MEMO

When the MV-8000 is operating as a synchronization slave, the synchronization signals can be received through either the MV-8000's MIDI IN connector or the MIDI IN connector of the DIF-AT24. However, you must set the Sync Mode (p. 9) to specify the connector through which the synchronization signals are to be received.

MEMO

When synchronized as a MIDI Clock slave, “Wait Note” of the Count In setting is not available.

Newly Added Functions in version 1.20



4

Set the synchronization parameters.

Here you will set parameters to specify how MIDI Clock synchronization will occur. Refer to the table below, and make the appropriate settings on the MV-8000 and on the externally connected master device (the sequencer or recorder that is transmitting the synchronization signals). For details on how to make settings on your master device, refer to its owner's manual.

Parameter	Setting	Settings on the externally connected master device
Sync Mode	Slave-MIDI (MIDI)	Set the device so that it will transmit MIDI Clock messages (Master).

5

Play back the master device.

Press the PLAY button on the master device; the MV-8000 will begin running in synchronization.



For an explanation of the other parameters, refer to the SYNC screen (p. 9).


Receive and synchronize to MTC (as a "slave" device)

MTC messages from an externally connected sequencer or recorder ("master device") can be received by the MV-8000, causing the MV-8000 to operate in synchronization as a slave device.

The example given below is a setup in which a recorder is the master device, and the MV-8000 receives MTC messages at its MIDI IN.

1

Connect your sequencer or recorder to the MV-8000.

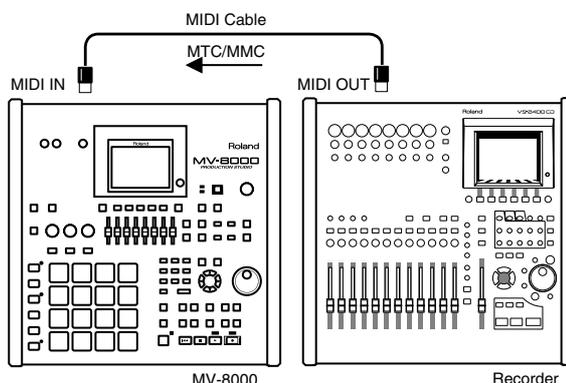

2

Press  .

The SONG SETUP MENU screen will appear.



MTC=MIDI Time Code



When the MV-8000 is operating as a synchronization slave, the synchronization signals can be received through either the MV-8000's MIDI IN connector or the MIDI IN connector of the DIF-AT24. However, you must set the Sync Mode (p. 9) to specify the connector through which the synchronization signals are to be received.



The example here also shows how to make settings to use MMC remote control from the externally connected device.



MMC=MIDI Machine Control

3

With the cursor located in the upper row of icons, press . Alternatively, select the SYNC icon and press . The SYNC screen will appear.



4

Set the synchronization parameters.

Here you will set parameters to specify how MTC synchronization will occur. Refer to the table below, and make the appropriate settings on the MV-8000 and on the externally connected master device (the sequencer or recorder that is transmitting the synchronization signals). For details on how to make settings on your master device, refer to its owner’s manual.

Parameter	Setting	Settings on the externally connected master device
Sync Mode	Slave-MTC (MIDI)	Set the device so that it will transmit MTC messages (Master).
MTC Frame Rate	Same as the frame rate setting of the master device.	For details on how to make settings on your master device, refer to its owner’s manual.

5

Set the MMC parameters.

Here you will make settings to allow MMC remote control from the externally connected device.

Refer to the table below, and make the appropriate settings on the MV-8000 and on the externally connected master device (the sequencer or recorder that is transmitting the synchronization signals). For details on how to make settings on your master device, refer to its owner’s manual.

Parameter	Setting	Settings on the externally connected master device
MMC Mode	Slave (MIDI)	Set the device so that it will transmit MMC messages (Master).

6

Play back the master device.

Press the PLAY button on the master device; MMC messages will be transmitted to the MV-8000, and the MV-8000 will begin running. Then MTC messages will be transmitted from the master device, causing the MV-8000 to synchronize with the MTC data.

MEMO

During synchronized playback as an MTC slave, there may be cases in which a track containing a long audio event drifts out of playback synchronization with other tracks. This occurs because MTC synchronization is not able to adjust the playback speed of an audio event, and is not a malfunction.

MEMO

When synchronized as a MTC slave, loop playback and count-in recording are not available.

Importing a portion of an Audio CD

You can import audio data from an Audio CD by specifying the desired start time and end time.


1

Execute steps 1–5 of “Importing from an audio CD” in Owner’s Manual of the MV-8000.

2

Press  (Execute).

The SET TIME popup will appear.

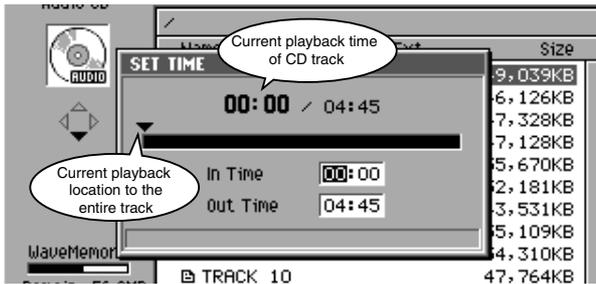

Parameter	Explanation
In Time	Specifies the start time within the track you selected. (Units are minutes:seconds)
Out Time	Specifies the end time within the track you selected. (Units are minutes:seconds)

Operation	Explanation
F1  (Set In Time)	While auditioning the CD, sets the In Time to the current location.
F2  (Set Out Time)	While auditioning the CD, sets the Out Time to the current location.
F3  (Play)	Auditions the region between the In Time and Out Time.
F4  (Stop)	Stops auditioning.
F5  (Execute)	Imports the region between the In Time and Out Time.
 (PREVIEW TO)	Auditions five seconds of sound ending at the parameter where the cursor is located (In Time or Out Time)
 (PREVIEW FROM)	Auditions five seconds of sound starting at the parameter where the cursor is located (In Time or Out Time)

3

Move the cursor to In Time, and use the VALUE dial to specify the time from which you want to begin importing the audio.

4

Move the cursor to Out Time, and use the VALUE dial to specify the time from which you want to end importing the audio.

5

Execute steps 6 of “Importing from an audio CD” in Owner’s Manual of the MV-8000.

Importing of the specified region will begin.

MEMO

When opening the SET TIME popup, In Time will be the beginning of the CD track (i.e., 00:00), Out Time will be the ending of the CD track.

HINT

Pressing [F1 (Set In Time)] or [F2 (Set Out Time)] while auditioning the CD, the In Time or Out Time will be set to the current location.

Easily selecting MIDI Events or Audio Events (Quick Region)

A Quick Region function has been added, allowing you to quickly select a region. Quick Region selects a specified region of the current track (SEQUENCE EDIT screen) or current note (PIANO ROLL EDIT screen).

In the SEQUENCE EDIT screen

- When the current track is a MIDI track
From the beginning to the end of the current measure of the current track will be selected (i.e., one measure).

- When the current track is an Audio track
If there is an audio event at the current time in the current track, that single audio event will be selected. The length selected will be the single audio event located at the current time.
If there is no audio events at the current time in the current track, from the beginning to the end of the current measure will be selected.

In the PIANO ROLL EDIT screen

If there is a note event at the current time in the current note (Target), a length corresponding to the duration of the note event will be selected.
If there is not a note event at the current time in the current note (Target), a length corresponding to the STEP TIME will be selected.

1

Press  .

The SEQUENCE screen will appear.

2

Press  (Seq Edit) or  (PianoRoll).

When you press  (Seq Edit), the SEQUENCE EDIT screen will appear. When you press  (PianoRoll), the PIANO ROLL EDIT screen will appear.

3

Move the cursor to a track (or note) that contains the events you want to region-select, making it the current track (current note).

4



Move the time so that the current time intersects the events you want to region-select.

This determines the events that will be edited.

5

Press  (Quick Rgn).

The events will be highlighted and selected.

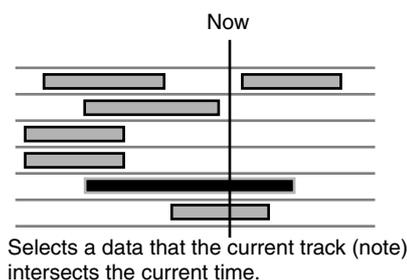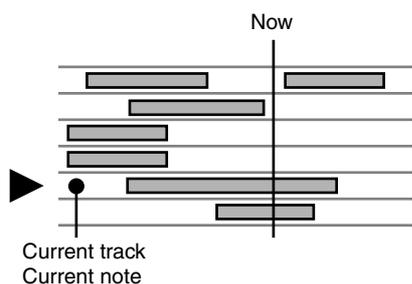

MEMO

A Quick Region function is valid in the SEQUENCE EDIT screen and the PIANO ROLL EDIT screen.

MEMO

You can't execute Quick Region on more than one track (note). However, after using Quick Region to select a region, then press [F2 (All Track Sel)] or [F2 (All Note Sel)], you can select that region across all tracks (notes).

Other functions that have been added

Initiate recording when a note message is received

In the RECORDING PARAMETER screen, you can now choose “Wait Note” as the Count In setting.

If you set Count In to “Wait Note,” the MV-8000 will begin recording as soon as any of the following actions occur.

- Receive a note message
(i.e., play a note on a keyboard or other device connected to MIDI IN)

- Press  .
- Strike  .

Directly select a pad bank

You can switch pad banks by directly specifying a number.

- 1 Hold down  , and strike  (1–16) that corresponds to the desired pad bank.

The pad bank will switch. You can switch between pad banks 1–6 for instruments, or between pad banks 1–16 for audio phrases.

MEMO

You can't use this method to switch to audio phrase pad banks 17–32.

Press [PAD BANKS] and use the VALUE dial or the numeric keys to specify the bank number.

Use the MIDI IN connector of the DIF-AT24

You can now use the MIDI IN connector of the DIF-AT24 (sold separately) to input MIDI data into the MV-8000.

You can add an additional MIDI IN/OUT connector by connecting the DIF-AT24.

Cancel Mixdown Mode

When mixdown is completed, you can now cancel Mixdown mode and return to the SEQUENCE screen.

- 1 Execute of “Combining a song into two tracks (Mixdown)” in Owner’s Manual of the MV-8000.

- 2 Press  , you finish the mixdown.
The “Mixdown Finished. Go to Mastering?” popup will appear.

- 3 Press  (Exit Mixdown).
The Mixdown Mode will turn off, the SEQUENCE screen will appear.

Added shortcuts

- You can now press [SHIFT] + a numeric key to switch the step time.

Function	Step Time	Function	Step Time
+ ABC	(30)	+ PQR	(240)
+ DEF	(60)	+ STU	(320)
+ GHI	(80)	+ VWX	(480)
+ JKL	(120)	+ YZ	(960)
+ MNO	(160)		

- Editing command shortcuts have been added.

Shortcut	Function
+	Deletes the selected event (Erase).
+	Moves the selected event to the current time location (Move).
+	Copies the selected event to the current time location (Copy&Paste).
+	If an audio event exists at the current time location, displays the AUDIO EVENT PARAMETER popup (valid only in the SEQUENCE EDIT screen).

MEMO

[SHIFT]+ a numeric key function is valid in the STEP REC screen, the SEQUENCE screen and the SEQUENCE EDIT screen.

MEMO

Editing command shortcuts are valid in the SEQUENCE EDIT screen and the PIANO ROLL EDIT screen.

Copy or move entire folders

When using the following commands in the FILE UTILITY screen, you can now perform operations on entire folders.

- Copy
- Move

The procedure is the same as when performing the operation on an individual file.



For details on performing the operation, refer to the owner's manual of the MV-8000 "Managing files (File Utility)."

Prevent the hard disk from being formatted (HD Format Protect parameter)

The HD Format Protect parameter lets you allow or prevent formatting of the hard disk. When you turn on the power of MV-8000, this will automatically be turned On. If the HD Format Protect parameter is On, it will not be possible to format the hard disk. If you want to format the hard disk, turn HD Format Protect to the "Off" setting.

1

SYSTEM

Press .

The SYSTEM MENU screen will appear.

Newly Added Functions in version 1.20

2

Press  (Global).

The SYSTEM GLOBAL screen will appear.

3

Sets the HD Format Protect parameters.

HD Format Protect	Explanation
Off	You will be able to format the hard disk. If you want to format the hard disk, select the "Off" setting.
[On]	You will not be able to format the hard disk. Normally, you should leave this at the "On" setting.

If you attempt to format the hard disk when the HD Format Protect parameter is On, a message of "Can't Format the Hard Disk. HD Format Protect is On." will appear.


Added and changed screens

The R-BUS related parameters have been gathered into a new R-BUS screen. This affects the SYSTEM MENU screen and the GLOBAL screen.

Also, the SYNC screen has changed due to the new synchronization functionality.


The SYSTEM MENU screen

R-BUS has been added to the SYSTEM MENU screen.

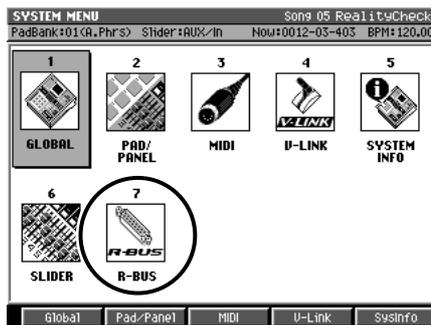


The SYSTEM GLOBAL screen.

HD Format Protect parameter has been added to the SYSTEM GLOBAL screen.

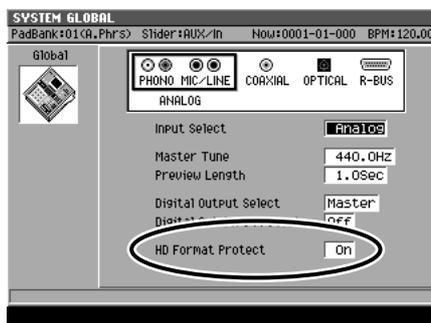

The R-BUS screen.

This screen lets you make R-BUS settings when the MV8-OP1 (sold separately) is installed.

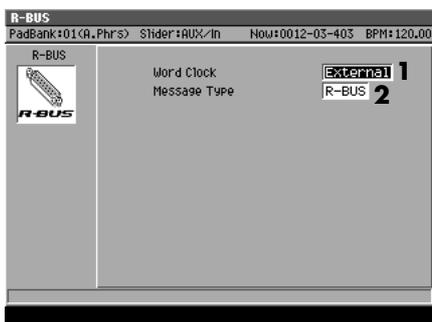

The screen contains the following parameters.

1. Word Clock

This setting specifies the word clock that the MV-8000 will use when digital audio is being transferred over an R-BUS connection between an external device and the MV-8000.

Setting	Explanation
Internal	The MV-8000 will use its own internal clock.
[External]	The MV-8000 will use the clock from the external device connected via R-BUS.

2. Message Type

This specifies the type of messages that will be used for communication between R-BUS devices when the MV-8000 is connected to an external device via R-BUS.

R-BUS device connected to the MV8-OP1	Setting	Explanation
VS-series unit (or similar) with an R-BUS connector	[R-BUS]	Use this setting for transferring digital audio via R-BUS, or when using MMC or MTC synchronization between R-BUS devices.
DIF-AT24 MV-8000	MIDI	Use this setting if the DIF-AT24 (sold separately) is connected to the MV8-OP1 and you're using the MIDI IN/OUT connectors of the DIF-AT24, or when you're connecting two MV-8000 units.

MEMO


The Word Clock parameter was located in the GLOBAL screen.

MEMO

If the DIF-AT24 is connected and you're using the MIDI OUT connector of the DIF-AT24, set Message Type to "MIDI." With a setting other than "MIDI," the MIDI device connected to the DIF-AT24's MIDI OUT connector will not operate correctly.

The SYNC screen

Sync Mode parameter and Error Level parameter have been added to the SYNC screen.

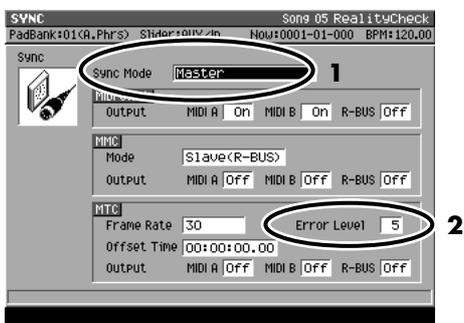

1. Sync Mode

This specifies the mode of operation when synchronizing an external device and the MV-8000.

Newly Added Functions in version 1.20

Setting	Explanation
Master	The MV-8000 will operate using its internal clock (Master).
Slave-MIDI (MIDI)	The MV-8000 will receive MIDI Clock messages via its MIDI IN connector, and operate as a slave.
Slave-MIDI (R-BUS)	The MV-8000 will receive MIDI Clock messages via its R-BUS connector, and operate as a slave.
Slave-MTC (MIDI)	The MV-8000 will receive MTC messages via its MIDI IN connector, and operate as a slave.
Slave-MTC (R-BUS)	The MV-8000 will receive MTC messages via its R-BUS connector, and operate as a slave.
Remote (MIDI)	The MV-8000 will receive Start, Stop, and Continue messages via its MIDI IN connector for remote control.
Remote (R-BUS)	The MV-8000 will receive Start, Stop, and Continue messages via its R-BUS connector for remote control.

2. Error Level

- Setting: 0–10 (the checking interval will be longer for larger values)

This specifies the interval at which the MTC reception status is checked when Sync Mode is set to Slave-MTC (MIDI) or Slave-MTC (R-BUS).

MEMO

The MV-8000 monitors the reception status, and will halt synchronized operation if it detects that a communication problem has occurred.

Changes in parameter specification

New default settings for the Shuffle Quantize parameters

The default values for the Shuffle Quantize parameters in the TRACK PARAMETER (MIDI) screen and RECORDING PARAMETER (MIDI) screen have been changed as follows.

Parameter	Before change	After change
Resolution	♪ (240)	♪♩ (120)
Rate	75%	66%

“Phrase” added to the Step Time parameter

In the AUDIO PHRASE STEP REC screen for an audio track, Phrase has been added as a choice for the Step Time parameter.

If Step Time is set to “Phrase,” the length of the step-recorded events will be the length of the audio phrase.