

Inserting Batteries



Forcing the cover open can cause damage. Please follow the procedure below to open the cover.



1 Slide the bottom cover halfway.



* The cover locks in this position.

2 Unlock the cover by sliding the lock down in the direction of the arrow.



* Release fingers from lock and it springs back to the locked position.

3 With the cover unlocked, slide the cover some more.




* The cover slides only to the position in the photograph.

4 Lift the cover to open it.




5 Insert the batteries.

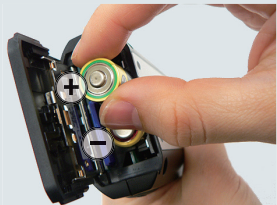

* Be sure the positive and negative terminals are oriented correctly.

6 Close the cover.

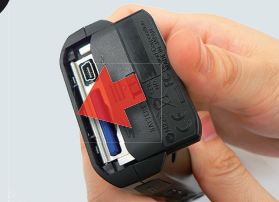

Demo Songs

The SD Memory Card has demo songs recorded on it.



- See “Playing back” on p. 42 in the Owner’s Manual for details on playing the demo songs.
- With the demo songs on the SD Memory Card, the recording time is reduced by the space occupied by the demo songs.
- **The demo songs will be deleted if the SD Memory Card is formatted.** You may want to create a backup of the demo songs on a PC.

 See “Downloading songs to a PC” on p. 56 for details on making a backup.

* Use of the song data supplied with this product for any purpose other than private, personal enjoyment without the permission of the copyright holder is prohibited by law. Additionally, this data must not be copied, nor used in a secondary copyrighted work without the permission of the copyright holder.

SD Memory Cards that can be used on the R-09



- The R-09 supports SD memory cards of 64 MB to 2 GB.
- Some memory card types or memory cards from some manufacturers may not record or play back properly on the R-09.

Copyright © 2006 ROLAND CORPORATION

All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.

