


How to change the reverb setting on the KD165 in AUTO PLAY

Press SONG PLAY




Display shows

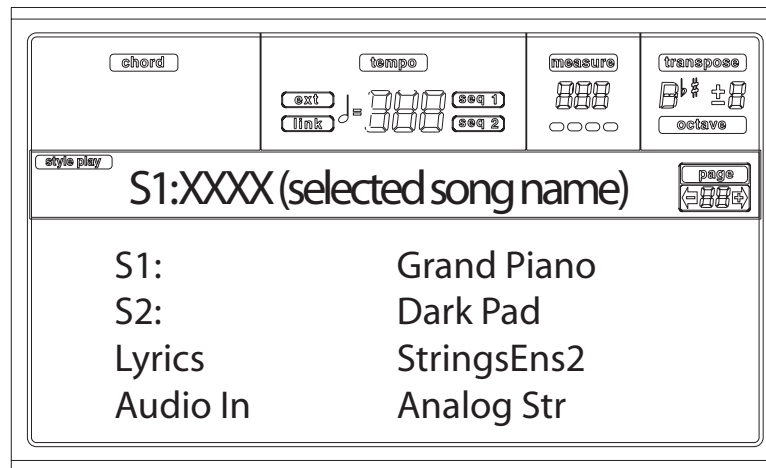

Press MENU




Display shows

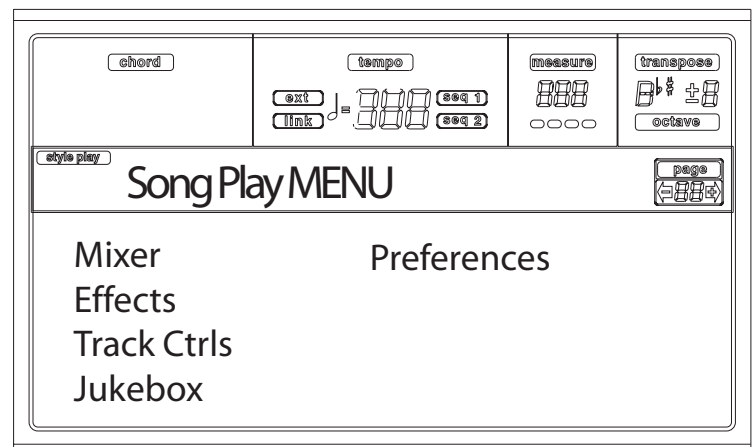

How to change the reverb setting on the KD165 in AUTO PLAY (page 2)


Select the MIXER option and go to Page 5

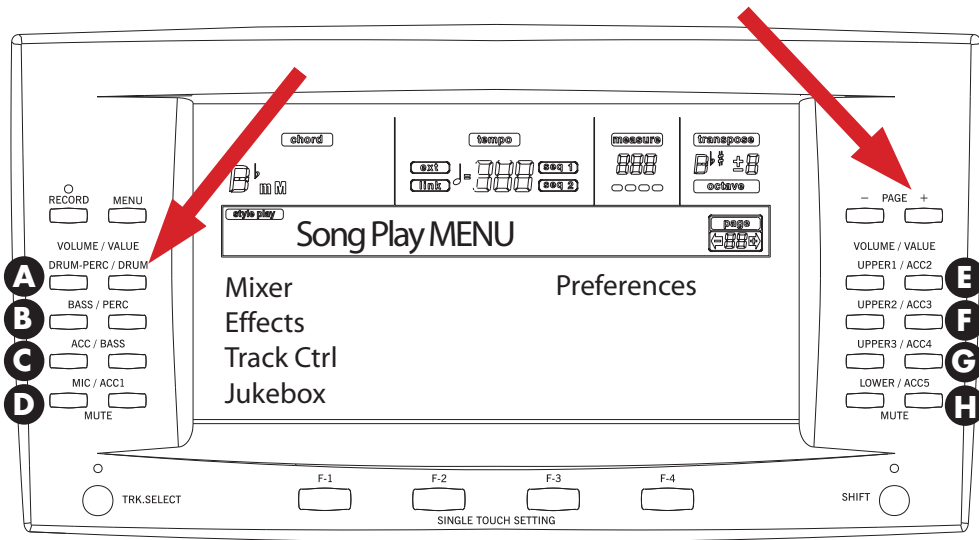

Display shows

1. Press A DRUM-PERC/DRUM

2 Turn the dial to change 3:0 to 1:5

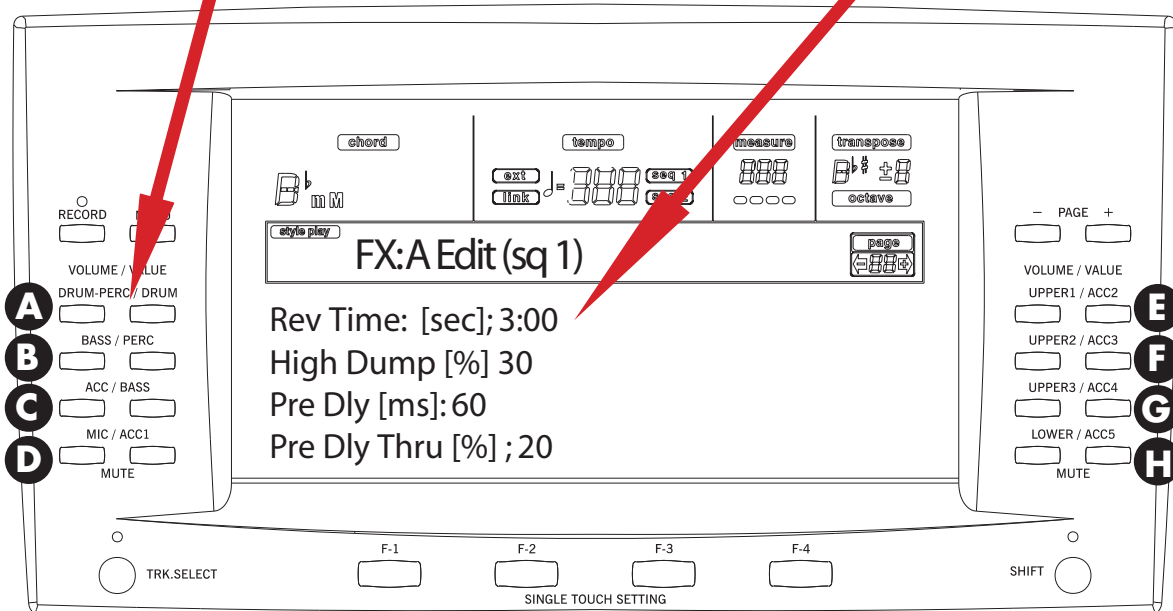

The 1.5 is a suggested reverb setting. Feel free to change it as you prefer. Higher values will make the piano sound more “whet”, lower value results dryer sound. When you are happy with the reverb, you can store the setting by pressing WRITE DISK IN USE.

Just follow the commands on the screen (pressing ENTER two times will save the setting.)

The new setting will remain in the global memory even after the piano is turned OFF.

If you want to do further changes, repeat the steps above.